



User Guide Wheel Wash

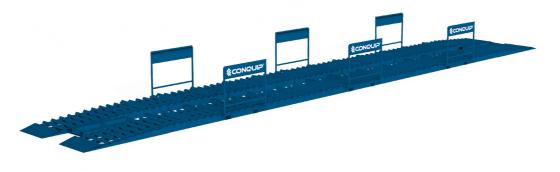

Product Information **Specification**

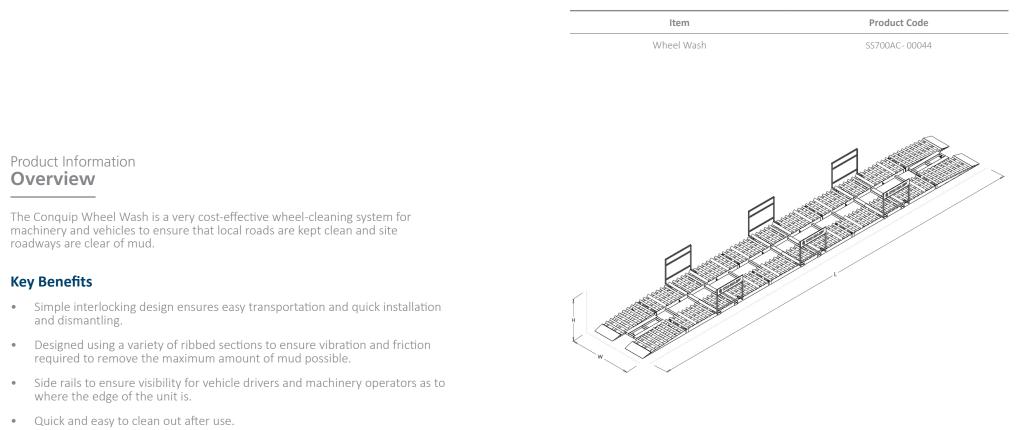


¹ Working Load Limit				
Height	Width	Length	Weight	WLL ¹
1480mm	3100mm	19,960mm	5550kg	44,000kg

ltem	Height	Width	Length
Ramp Section	270mm	2890mm	2600mm
Length Section	290mm	2890mm	4950mm

Product Information Parts Diagram

Wheel Wash

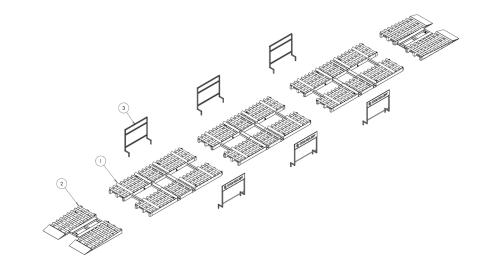

NOTE: These parts are for this model, they may differ for previous versions. Please contact Conquip with any queries.

Item Number	Part Number	Description	Weight	Quantity
1	ZZ450073	Wheel Wash Flat Sub-Assembly	1350kg	3
2	ZZ450074	Wheel Wash Ramp Sub-Assembly	670kg	2
3	ZZ450075	Side Rail Assembly	26kg	6

Original Working Instructions **Usage Instructions**


Important Usage Notes

- Ensure there is enough space to safely install and maintain the Wheel Wash System.
- Ensure there is adequate access for trucks and vehicles to drive onto and drive off the Wheel Wash unit.
- When assembling take care to prevent hands or feet being trapped into potential pinch points between sections.
- Install on level ground only.

Installation Instructions

1. Start the installation process at one end of the system (see Fig 1.1). Lift one ramp section into place using a suitably rated forklift. (If there is no forklift available, a suitably rated lifting apparatus can be used with lifting chains to move the sections into place.)

Fig 1.1

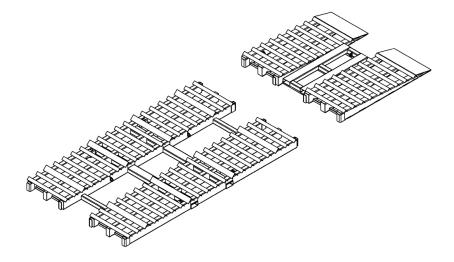


Original Working Instructions **Usage Instructions**

2. Lift and move a central section so that the ends have tabs that can interlock with each other (see Fig 1.2).

Fig 1.2

3. Connect it by lining the tabs up so that they align with the section below. Lower the section into place (see Fig 1.3).

Fig 1.3

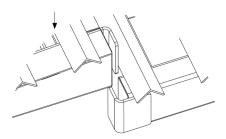


4. Check it is secured (see Fig 1.4).

Fig 1.4


Original Working Instructions **Usage Instructions**


5. Repeat that for the remaining sections, adding 2 more central sections to the configuration and the remaining ramp section, (see Fig 1.5).

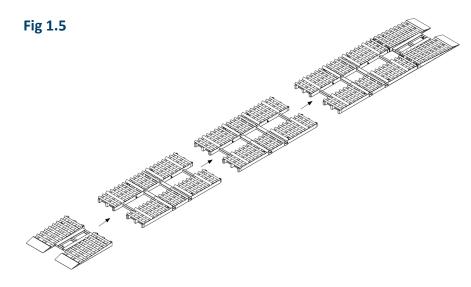

6. Now, insert the side rails. Lift the side rails and use the locating slots to secure them in place (see Fig 1.6). There should be 3 down each side of the unit.

Fig 1.6

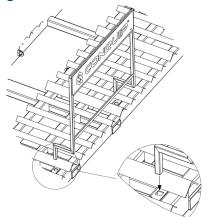

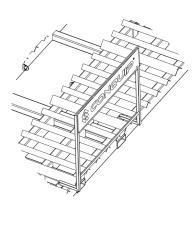

Original Working Instructions **Usage Instructions**

Usage Instructions

- 1. Once installation is complete, large vehicles and machinery (that do not exceed the capacity of the Wheel Wash) can be driven down the length of the Wheel Wash System, as considered safe by the site-specific risk assessment.
- 2. As the vehicle proceeds down the ramp mud will be shaken off and will fall through the drive-over sections onto the ground.
- 3. If the build-up of mud and waste starts to cause the system to be ineffective, lift the sections out of the way and clear away the waste using an excavator or suitable machinery.

Original Working Instructions **Safety Instructions**

Basic Safety

A site-specific Risk Assessment, and lift plan where applicable, must be completed by the responsible person before using this equipment to control risks, produce a safe system of work and ensure safety for you, your colleagues and others. Your risk assessment will determine the correct Personal Protective Equipment (PPE) for the task you are doing. You must use it. Conquip recommends that you should wear:

- Suitable clothing
- Gloves
- Hard hat
- Protective footwear (steel toecaps)
- Safety glasses



Important Safety Notes

- Read these instructions before using this equipment. If there is anything you do not understand or if you have any concerns do not use this equipment. Contact your supervisor or Conquip Engineering Group for advice.
- You must check that you have considered all the safety requirements for the task you are doing and that this equipment is suitable.
- You must protect bystanders and the general public by preventing access to the working area.
- Do not use this equipment if you are tired, unwell or under the influence of alcohol or drugs. If you are taking any medicine or undergoing treatment you should inform your supervisor.

Usage & Transportation

- Never unevenly load this equipment.
- The weight of the equipment, together with its attachments, must be added to the weight of the load when calculating the total load that will be imposed on the lifting apparatus / operating machine.
- This equipment must be used in conjunction with the load ratings of the lifting apparatus / operating machine. (Refer to the manufacturers' load ratings and original working instructions).
- Make sure you know how to use this equipment and understand all aspects of its operation in case of emergency.
- This equipment weighs more than 25kg. Do not lift or manhandle without machine assistance.
- Do not operate this equipment near overhead power lines.
- Take care in confined spaces, near ceilings or similar hazards. This equipment was designed for vertical lifting. Do not drag, or swing.
- Before operating this equipment, check that you have enough space for you to work safely and make sure that the working area is clear of hazards, obstructions and personnel.
- Before lowering equipment make sure that the landing zone is clear and capable of accepting the size and weight of the load.
- Crush Risk. Keep hands and feet clear of the equipment at all times to avoid injury.
- Do not exceed the maximum Working Load Limit (WLL) shown on the serial plate. Ensure that the WLL
 on the individual lift points is not exceeded.
- Before lifting, check that the load is secured, balanced and stable. Allow space for the equipment to move if the load shifts.
- Manoeuvre loaded or raised equipment carefully. Travel and turn slowly to avoid unit becoming unstable.

Personnel

- All personnel must wear relevant personal protective equipment.
- Do not wear loose clothing or jewellery and tie back long hair to avoid becoming tangled or trapped in this equipment. You must make everyone in the work area aware of what you are doing.
- All personnel involved in the lifting operation must be competent to do so and must have been briefed in conjunction with this User Guide available from Conquip Engineering Group, the manufacturer.

Equipment Maintenance & Cleaning

- It is mandatory that the equipment is thoroughly examined regularly, by a qualified engineer, to ensure compliance with relevant regulation/s. (Conquip recommend to carry out thorough examination every six months).
- This product may incorporate various loose and detachable items of lifting gear. Refer to the separate requirements for the safe use of those items.
- When not being used, store the unit in a clean, upright condition and in a safe place where it will be protected from thieves and unauthorised users.
- This equipment must be inspected by the responsible person before each use and then regularly, as
 determined by your risk assessment or working practice. If you have any concerns about condition or
 suitability do not use.

Important Notes

- This User Guide is for this Conquip product only.
- Any movements of the product must be thoroughly planned before the work commences to identify
 potential hazards and assess risk.
- All personnel involved in lifting and transportation of this product must have read this User Guide and must be properly briefed.
- You must be competent, alert and medically fit when using this equipment. If you have a medical
 condition, a mental or physical disability, you must seek advice from a medical professional before using
 this equipment.

Talking to us is easy We're here to help

Call us on (02) 8844 4590 Email us at sales@conquipgroup.com.au www.conquipgroup.com.au

Copyright C 2020 Conquip Engineering Group. All Rights Reserved. Wheel Wash User Guide - Issue 3