


USER GUIDE

RESCUE CAGE

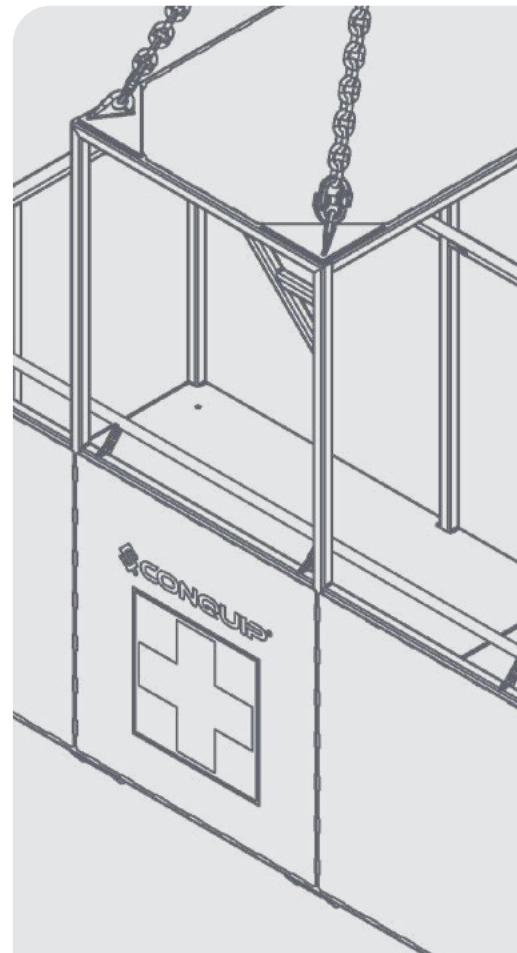

DISCLAIMER

Do not attempt to handle or operate this equipment before you have received sufficient training. Before use, operatives must have carried out all checks featured on the Visual Inspection Sheet on page 15. It is imperative that you have read the General Safety Instructions on page 16 and sufficiently familiarised yourself with the Operational Procedures in this document.

Note that this item is compliant only to the standards specified in this User Guide and it is therefore the duty of the responsible person(s) to review and ensure compliance.

CONTENTS

PRODUCT INFORMATION

INTRODUCTION	04
SPECIFICATION (CAGE)	06
PARTS DIAGRAM (CAGE)	07
SPECIFICATION (MOUNTING BRACKETS)	08
PARTS DIAGRAM (MOUNTING BRACKETS)	09

OPERATIONAL PROCEDURES

IMPORTANT USAGE NOTES	10
MEDICAL DISCLAIMER	10
USAGE INSTRUCTIONS	11
STORAGE INSTRUCTIONS	11
USING THE EVACUATION POINT	12

MAINTENANCE & INSPECTION

MAINTENANCE REGIME	14
SAFETY DECALS	14
VISUAL INSPECTION SHEET	15

GENERAL SAFETY INSTRUCTIONS

SAFETY INSTRUCTIONS	16
GENERAL NOTES	17

LEGAL

TERMS AND CONDITIONS	18
EC DESIGN CONFORMITY	22
STANDARDS AND REGULATIONS APPLICABLE	23

INTRODUCTION

OVERVIEW

The Conquip [Rescue Cage](#) is a crane-lift frame predominately used for rescuing stranded personnel working at height.

The inverted T-shape design allows the crane operator to position the cage underneath operatives suspended from a leading edge. It can also be used for other site-specific applications, such as carrying out maintenance work in hard-to-reach areas.

A designated harness attachment point per occupant (four) and handrails inside the cage provide occupants with support and security during a lift.

KEY BENEFITS

VERSATILE DESIGN

Inverted T-shape design means the cage can be used for other site-specific applications, such as maintenance work in hard-to-reach areas.

EASY TO ACCESS

Entry/exit door on the short end allows for access from building levels and makes the cage ideal for rescuing personnel suspended from a leading edge.

TRANSPORT AND RESCUE

The cage has capacity for a maximum of four people, or an injured person on a stretcher with three additional occupants. A dedicated four-leg chain sling is supplied with the unit as standard for easy manoeuvrability around site. Stretcher mounting brackets are available as an optional extra and are fitted to designated points in the cage to safely store the stretcher when it is not in use.

PERSONNEL SAFETY

A recessed base prevents foot traps and potential crush risks and the cage also features a Square Hollow Section (SHS) for use as an Emergency Descent Point (EDP) in an evacuation.


SAFE AND COMPLIANT

Manufactured with multiple safety features ensuring full compliance with all safety and lifting regulations, including BS EN 14502-1:2010 and BS 8681:2024.

SUPERIOR VISIBILITY

Half-height solid sides offer personnel in the cage protection while also providing excellent visibility for them and the crane operator.

SPECIFICATION

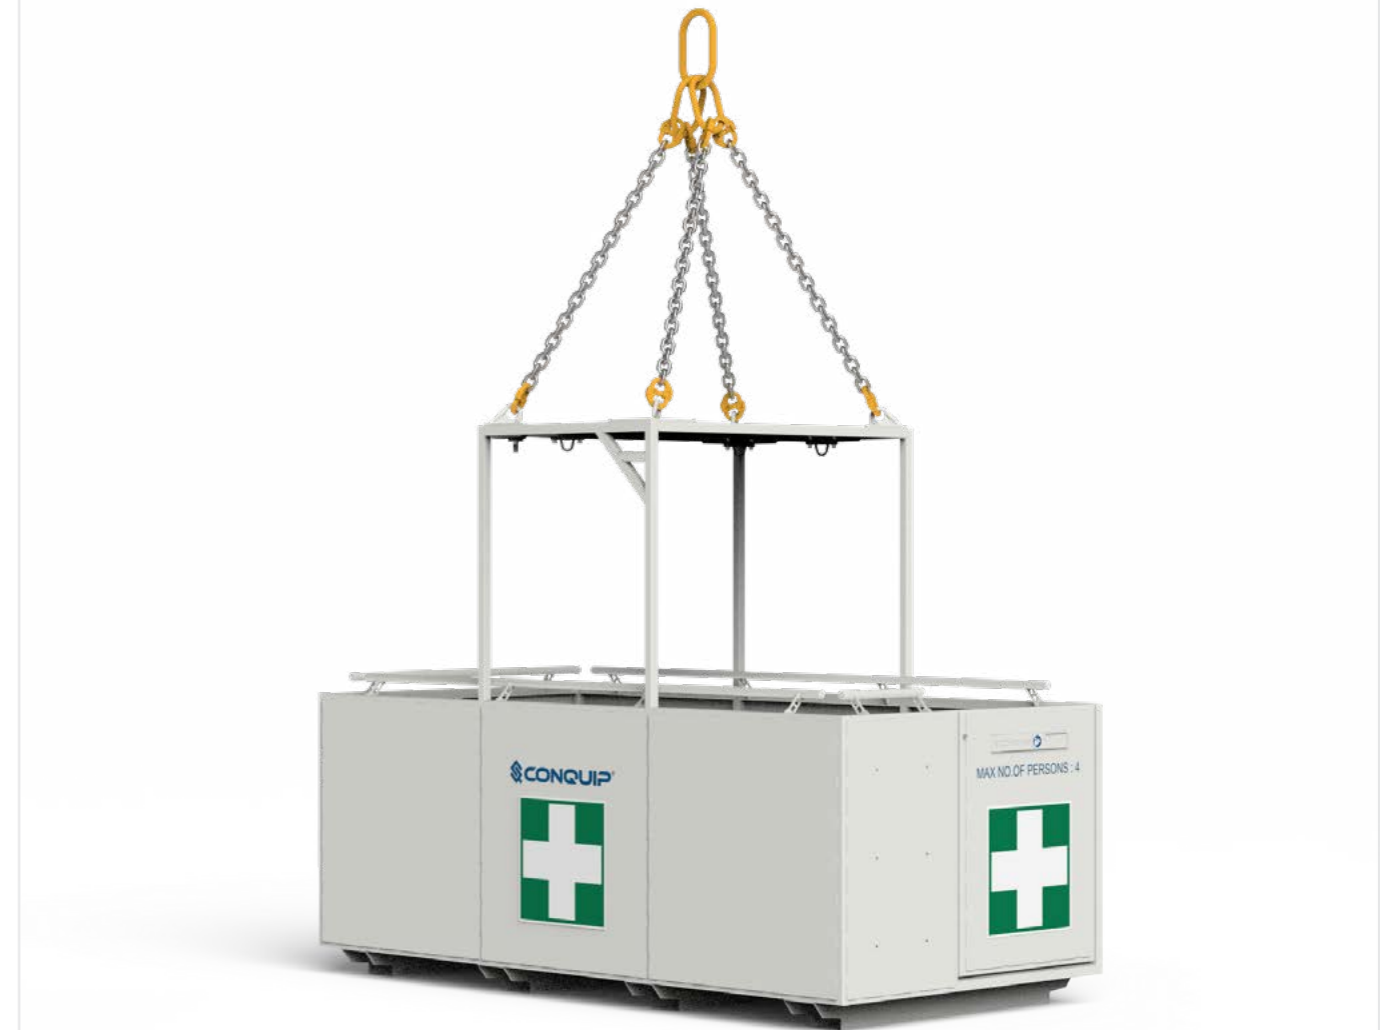


CODE	WEIGHT (kg)	WLL* (kg)	CAPACITY (Persons)
CA125AH-01000	680	1000	4

*Working Load Limit

SPECIFICATION


ITEM	PRODUCT CODE
Rescue Cage	CA125AH-01000

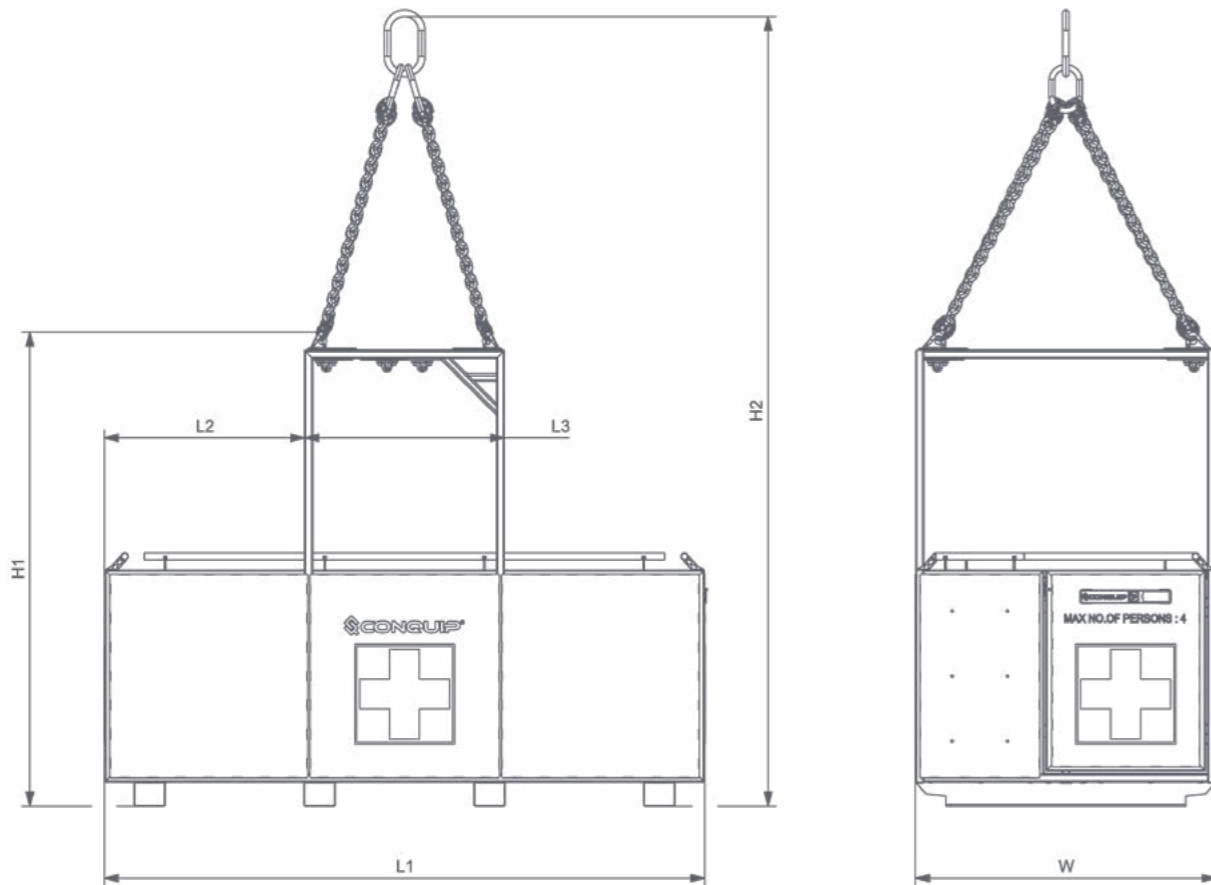

L1 (mm)	L2 (mm)	L3 (mm)	W (mm)	H1 (mm)	H2 (mm)
3005	1000	1000	1505	2370	3950

PARTS DIAGRAM

RESCUE CAGE

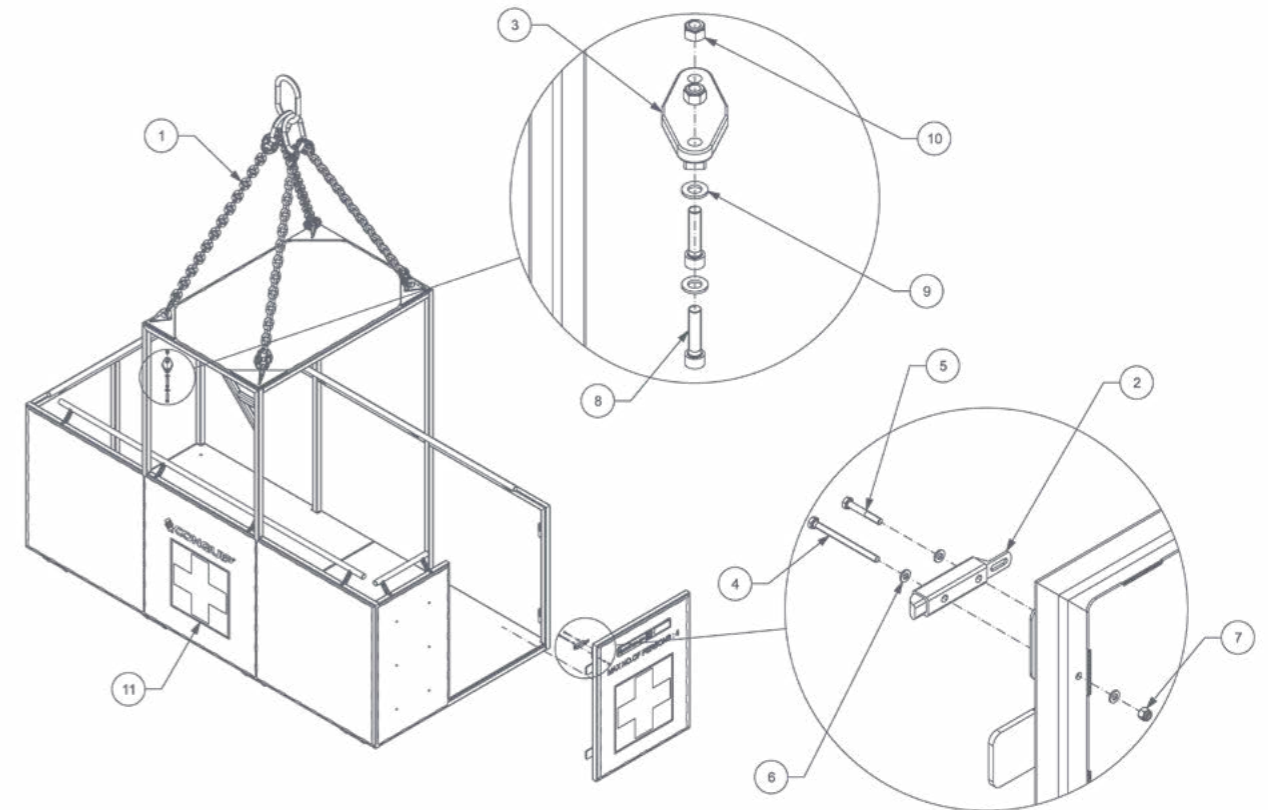


ITEM NUMBER	PART	DESCRIPTION	QUANTITY
1	CF1.35-16-4ZX8	4-Leg Chain Sling Assembly 16mm G8	1
2	ZZ170001	End Slam Locking Catch	1
3	ZZ960370	Harness Anchor Point	4
4	NS800840	M6 x 80 Hex Head Screw	1
5	NS801082	M6 x 40 Hex Head Bolt	1
6	NS800737	M6 Plain Washer	4
7	NS800826	M6 Nyloc Nut	2
8	NS801037	M12 x 50 Socket Head Screw	8
9	NS800454	M12 Plain Washer	8
10	NS800015	M12 Nyloc Nut	8
11	NS800909	First Aid Decal	4

NOTE: These parts are for this model, they may differ for previous versions. Please contact Conquip with any queries.

SPECIFICATION

ITEM	PRODUCT CODE
Stretcher Mounting Brackets	ZZ170098

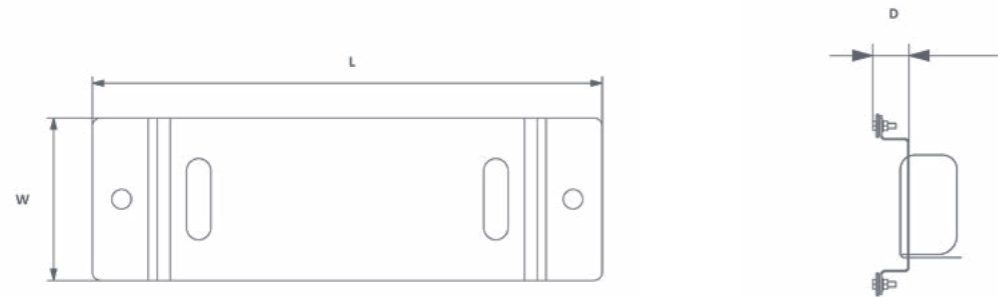


L (mm)	D (mm)	W (mm)
314	64	100

NOTE: Stretcher Mounting Brackets are an optional extra, they are not fitted as standard. Contact Conquip to arrange this modification to your cage.

PARTS DIAGRAM

STRETCHER MOUNTING BRACKETS

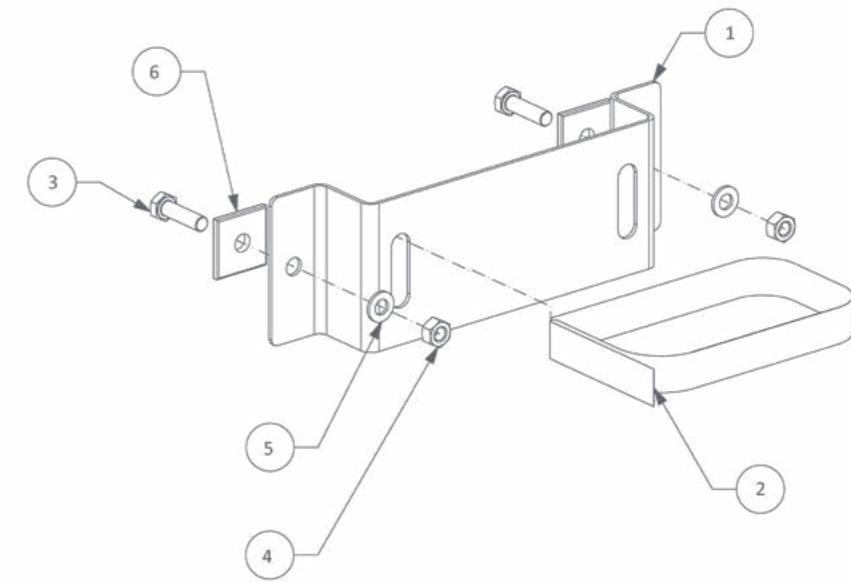

ITEM NUMBER	DESCRIPTION	QUANTITY
1	Buckle Strap Bracket	3
2	25mm Adjustable Buckle Strap Made With Velcro® Brand Tape	3
3	M10 Hex Head Screw	6
4	M10 Hex Nut	6
5	M10 Plain Washer	6
6	M10 Mild Steel Square Plate Washer	6

NOTE: These parts are for this model, they may differ for previous versions. Please contact Conquip with any queries.

OPERATIONAL PROCEDURES


IMPORTANT USAGE NOTES

- After use, the cage must be thoroughly cleaned to ensure the removal of any bodily fluids or similar. Ensure that all medical devices and medication are also removed.
- This cage can transport a single stretcher with casualty and a maximum of three assistants, providing there is enough room for all to be safely transported.
- Do not use this cage to raise or transport goods.
- The Rescue Cage can be used for other applications, such as carrying out maintenance work in hard-to-reach areas, if it is used in conjunction with a site-specific risk assessment and method statement.

MEDICAL DISCLAIMER

These instructions are not intended as a guide to any medical practice or medical procedures. The information in this document is limited to the cage, its components and how they work. The casualty is the sole responsibility of the persons offering medical assistance. If the cage is not suitable for the situation, do not use it.

FIG.1

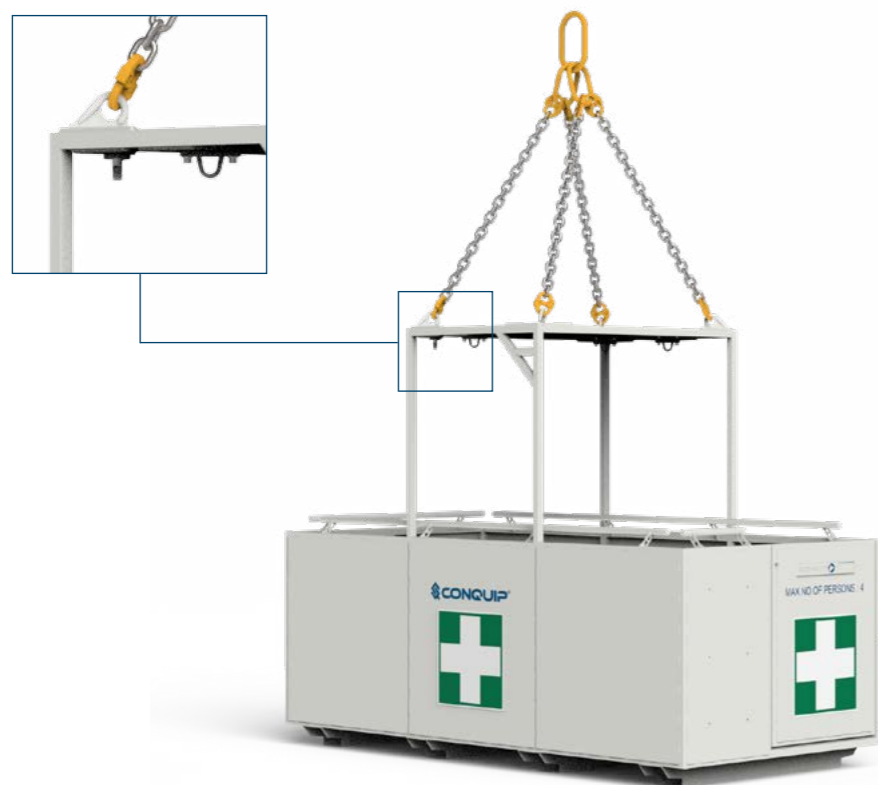

USAGE INSTRUCTIONS

01. The cage is supplied with a dedicated four-leg chain sling already attached with couplers. Do not remove.
02. Lift the cage to the location it is required. If this is in between floor and ceiling levels on a building structure, ensure the door end of the cage is inside the building.
03. Load the casualty or stranded person(s); a maximum of four persons are permitted inside the cage. Ensure weight in the cage is evenly distributed where possible.
04. When wearing a harness and restraint lanyard, attach the lanyard from the harness to a designated anchorage point in the cage. (Fig.1)
05. Carefully close the self-latching cage door completely.
06. The cage can now be lifted and moved to its required position. Move slowly and carefully; do not jolt the cage.
07. When in position, lower the cage on to firm level ground.
08. Having lowered the cage to the ground, unload and ensure the cage door is fully closed.
09. If you have finished with the cage, detach it from the lifting equipment and give it a thorough clean.

STORAGE INSTRUCTIONS

01. The Rescue Cage is predominately used for rescuing injured personnel, so it is often an unused piece of equipment on-site.
02. The Rescue Cage should be stored near lifting equipment and should be easily accessible to ensure there are no delays to rescue operations.
03. Conquip offer mounting brackets to store the stretcher safely against the side of the cage until it is needed.
04. To store the stretcher, undo the Velcro® straps, feed the stretcher through them and secure each strap.
05. The stretcher is now secure.

USING THE EVACUATION POINT

DISCLAIMER


The Lead Appointed Person (Lead AP) shall be solely responsible for ensuring that any emergency descent procedure implemented in connection with the Rescue Cage is fully compliant with all relevant health and safety legislation, the applicable British and international standards and specific site risk assessment and method statements governing lifting operations.

The Lead AP must ensure that all procedures, equipment selection and personnel competencies used during an emergency descent meet or exceed the statutory and organisational requirements in force at the time of use, and no deviation from such requirements are permitted.

Personnel should be briefed and trained under the Lead AP's authority to confirm their understanding of these obligations prior to engaging in any lifting activity.

This procedure is provided solely as a general technical guide and shall not be considered a substitute for site-specific or regulatory-mandated emergency descent procedures. It should only be applied in scenarios where a more detailed, robust and formally approved procedure is not available. In all cases, the Lead AP must prioritise compliance with the governing legal, safety and engineering controls applicable to the specific site and equipment.

EMERGENCY DESCENT POINT (EDP)

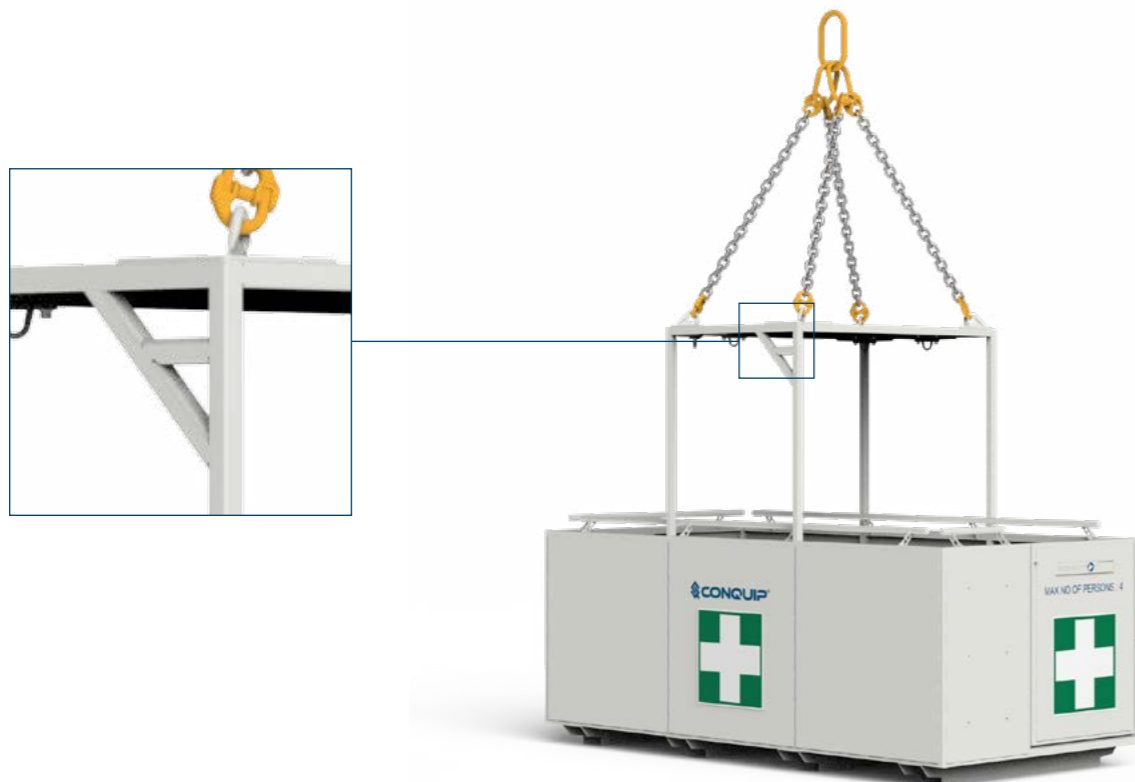

PROCEDURE

In the event that normal recovery of the Rescue Cage cannot be achieved, the authorised occupant shall immediately initiate the emergency communication procedure by notifying the crane operator, the banksman/signaller and designated ground rescue personnel via the prescribed communication system, and communication shall be maintained continuously for the duration of the operation.

All occupants shall remain secured to the designated harness points/fall arrest anchor points within the cage until a competent person confirms that emergency descent is required and that the descent path is free from obstructions.

The user shall identify and only utilise the designated Emergency Descent Point (EDP) as the structurally verified and load-rated Square Hollow Section (SHS) provided for this specific purpose; under no circumstances must the user attach a descent device to any other cage component, including but not limited to handrails, mesh panels, gates, floor sections, or lifting lugs.

The user shall attach an approved and serviceable personal descent device to the SHS EDP in accordance with the manufacturer's instructions, ensuring that any connector, whether karabiner, sling, or other certified linking component, is correctly oriented, fully closed and positively locked. The user should conduct a visual and tactile check to confirm proper seating of the device prior to use.

Once the descent device is secured to the SHS EDP, the user shall connect the device's user line to the appropriate attachment point of their personal fall-protection harness and must only disconnect from the in-cage harness point/fall-arrest anchor when authorised and when it has been assessed as safe to do so. The user shall initiate and control the descent strictly in accordance with the device manufacturer's operational procedures and must maintain a stable posture and continuous communication with ground personnel throughout.

Upon reaching the ground, the user shall detach their personal fall-prevention harness from the device user line, move clear of the landing zone and notify the ground controller that descent has been completed. Following any emergency descent deployment, the cage, the SHS EDP and all associated lifting and personal protective equipment shall be removed from service pending inspection and certification by a competent lifting-equipment engineer. The event must be recorded in the site's statutory documentation in accordance with organisational and regulatory requirements.

MAINTENANCE & INSPECTION

MAINTENANCE REGIME

- It is mandatory that the equipment is thoroughly examined regularly, by a qualified engineer, to ensure compliance with relevant regulations. Conquip recommend carrying out a thorough examination every six months.
- This equipment may incorporate various loose and detachable items including, but not limited to pins, bolt assemblies and adaption plates. Refer to the separate requirements for the safe use of those items.
- When not being used, store the unit in a clean, upright condition and in a safe place where it will be protected from thieves and unauthorised users.
- This equipment must be inspected by the responsible person before each use and then regularly, as determined by your risk assessment or working practice. If you have any concerns about the equipment's condition or suitability, do not use it.

SAFETY DECALS

These are the safety decals featured on the machinery. When carrying out the visual inspection of the machinery, please ensure all decals are present before checking this item off the list.



VISUAL INSPECTION CHECKLIST

INSPECTION ITEMS	RESULTS		COMMENTS
	PASS	FAIL	
Serial Number			CQ.....
Product Code			
Working Load Limit (Kg)			
Conforms to user guide specification			
Check master link for distortion, nicks, gouges			
Check chains for rust pitting, nicks, gouges			
Check component connectors are fitted correctly			
Check lift points for bends or distortion			
Check harness points for security, distortion and damage			
Check Square Hollow Section (SHS) used as the Emergency Descent Point (EDP) for bends or distortion.			
Check handrails for security, distortion and damage			
Check the stretcher working and fit for use			
Check the operation of the door			
Check the floor is clear of obstacles or obstruction			
Carry out a general visual inspection of the body, checking for distortion and damage			

SIGNATURE			
Name	Position	Qualification	Signature & Date

GENERAL SAFETY INSTRUCTIONS

The machinery should be properly operated and maintained to keep it in a safe, efficient operating condition. Be sure that all fixings and components are free of mud or other matter that might cause issues hazardous to the operator, serviceman, or other personnel or equipment. Report all malfunctions to those responsible for maintenance, and do not operate the equipment until corrected. Normal service or maintenance performed as required can prevent unexpected and unnecessary downtime.

This operations manual describes general inspections, servicing and operation with the normal safety precautions required for normal servicing and operating conditions. It is not a guide, however, for abnormal conditions or situations, and therefore, servicemen and operators must be safety conscious and alert to recognise potential servicing or operating safety hazards at all times, and take necessary precautions to assure safe servicing and operation of the machine.



M002
Refer to instructions manual



M004
Wear eye protection



M008
Wear safety footwear



M009
Wear protective gloves



M010
Wear protective clothing



M014
Wear head protection



M015
Wear high-visibility clothing



M018
Wear a safety harness

GENERAL NOTES

- Read this operations manual and learn the operating characteristics and limitations of the machinery. Know what operating clearances the machine requires.
- Read and understand all the safety signs prior to operation.
- If the safety signs are obstructed by dirt or debris, clean them using mild soap and water prior to operation.
- If the safety signs are damaged or illegible, replace them immediately, prior to operation.
- Be aware of operating hazards that weather changes can create on the job. Know proper procedures to follow when a severe rain or electrical storm strikes.
- Never attempt to operate or work on machinery when not feeling physically fit.
- Never wear loose clothing, rings, watches, heavy gloves etc., that might catch and result in injury.
- Know what safety equipment is required and use it. Such equipment may be: hard hat, safety glasses, reflector type vests, protective gloves and safety footwear.

TERMS & CONDITIONS

CONQUIP ENGINEERING GROUP STANDARD PRODUCT WARRANTY

01. COMMENCEMENT

1.1 This Warranty shall commence on the Commencement Date and shall continue until the earlier of:

- (a) the Expiry Date; or
- (b) the date on which it may be voided in accordance with clause 4.1(b)

when it shall terminate automatically without notice.

02. DUTY OF GOOD FAITH

2.1 The Purchaser shall in the exercise of its rights under this Warranty and in the compliance with its obligations under this Warranty be subject to and shall in all respects owe and comply with a duty of good faith to the Warrantor.

03. NATURE AND EXTENT OF COVER

3.1 Subject to clause 3.2 the Warrantor agrees and undertakes to the Purchaser that it shall be liable to the Purchaser under and in accordance with the terms of this Warranty in the event that:

- (a) prior to the Expiry Date the Purchaser shall notify a Warranty Claim to the Warrantor; and
- (b) the Equipment or any relevant part of the Equipment shall have become unusable as the result of defective material or defective workmanship prior to the Expiry Date.

3.2 The Warrantor's obligation under clause 3.1 shall be expressly subject to the provisions of clauses 4, 5 and 6 and conditional upon the Purchaser's compliance in full with the provisions of clause 7.

04. RESTRICTIONS

4.1 The following restrictions apply to this Warranty:

(a) This Warranty is personal to the Purchaser and neither the legal benefit nor legal burden of this warranty may be assigned or novated or otherwise transferred by the Purchaser to any other party. Any purported assignment, novation or transfer shall not be binding upon the Warrantor.

(b) This Warranty shall be void in the event that the Purchaser:

(i) cannot provide authentic and original documentary evidence that the Purchaser has during the period between the Commencement Date and the Expiry Date complied with the Maintenance and Servicing Requirements; and/or

(ii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Usage Cycle Parameters; and/or

(iii) has, during the period between the Commencement Date and the Expiry Date, exceeded the Purchaser's Use Parameters; and/or

(iv) has carried out, or procured the carrying out by any third party of, any repair to the Equipment or any part of the Equipment which is not an Authorised Repair; and/or

(v) has operated the Equipment after having replaced any part of the Equipment with a part which has not been supplied and fitted by the Warrantor; and/or

(vi) has modified the Equipment in any way prior to use.

05. EXCLUSIONS

5.1 The following are excluded from the scope of this Warranty:

(a) Loss of and/ or damage to the Equipment or any part of it resulting from any collision between the Equipment and any other fixed or stationary or mobile object whatsoever, irrespective of whether that collision was or was not caused by the Purchaser; and/or

(b) Loss of and/or damage to any personal property and/or possessions or other equipment not forming part of the Equipment but which is present in or about the Equipment; and/or

(c) loss and/or damage which is covered by any other insurance policy taken out and maintained by the Purchaser or in respect of which the Purchaser has a contractual obligation to do so; and/or

(d) loss and/or damage to the equipment which is consistent with the use by the Purchaser of the Equipment:

(i) in compliance with the Maintenance and Servicing Requirements; and

(ii) in compliance with the Usage Cycle Parameters; and

(iii) in compliance with the Use Parameters; and

(iv) having only carried out Authorised Repairs to the Equipment; and

(v) having all and any replacement parts fitted by the Warrantor; and

(vi) in unmodified form.

06. LIMITATION OF LIABILITY

6.1 The Warrantor's liability to the Purchaser shall be limited as follows:

- (a) The Warrantor shall not in any circumstances be liable to the Purchaser for indirect and/or consequential and/or economic loss suffered and/or incurred as the case may be by the Purchaser; and
- (b) The Warrantor shall only be liable to the Purchaser for the reasonable and proper costs reasonably and properly incurred by the Purchaser directly in connection with the repair and/or replacement (at the Warrantor's absolute discretion) of the Equipment or any part of the Equipment; and
- (c) The Warrantor's liability to the Purchaser shall notwithstanding any other provision of this Warranty, not in any circumstances exceed the Purchase Price of the Equipment.

07. WARRANTY CLAIMS

7.1 The Purchaser shall in respect of any claim against the Warrantor under this Warranty and within 24 hours of the occurrence of the subject matter of the Warranty Claim:

- (a) Complete in full and submit to the Warrantor a Warranty Claim in the form annexed to Schedule 4;
- (b) Provide date stamped or date identifiable photographs evidencing the claim; and
- (c) Make the Equipment or the relevant part of the Equipment available to the Warrantor for inspection within 48 hours of notification of the relevant Warranty Claim.

08. ENTIRE AGREEMENT

8.1 This Warranty constitutes the entire agreement between the parties and supersedes and extinguishes all previous promises, assurances, warranties, representations and understandings between them, whether written or oral, relating to its subject matter.

8.2 Each party agrees that it shall have no remedies in respect of any statement, representation, assurance or warranty (whether made innocently or negligently) that is not set out in this Warranty. Each party agrees that it shall have no claim for innocent or negligent misrepresentation or negligent misstatement based on any statement in this Warranty.

No variation of this Warranty shall be effective unless it is in writing and signed by the parties (or their authorised representatives).

09. WAIVER

No failure or delay by a party to exercise any right or remedy provided under this Warranty or by law shall constitute a waiver of that or any other right or remedy, nor shall it prevent or restrict the further exercise of that or any other right or remedy. No single or partial exercise of such right or remedy shall prevent or restrict the further exercise of that or any other right or remedy.

10. SEVERANCE

10.1 If any provision or part-provision of this Warranty is or becomes invalid, illegal or unenforceable, it shall be deemed deleted, but that shall not affect the validity and enforceability of the rest of this Warranty.

10.2 If any provision or part-provision of this Warranty is deemed deleted under clause 10.1 the parties shall negotiate in good faith to agree a replacement provision that, to the greatest extent possible, achieves the intended commercial result of the original provision.

11. THIRD PARTY RIGHTS

11.1 This Warranty does not give rise to any rights under the Contracts (Rights of Third Parties) Act 1999 to enforce any term of this Warranty.

12. GOVERNING LAW

12.1 This Warranty and any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with it or its subject matter or formation shall be governed by and construed in accordance with the law of England and Wales.

13. JURISDICTION

13.1 Each party irrevocably agrees that the courts of England and Wales shall have exclusive jurisdiction to settle any dispute or claim (including non-contractual disputes or claims) arising out of or in connection with this Warranty or its subject matter or formation.

DESIGN CONFORMITY (EC & UK)

- (01) This certificate meets the requirements of the Machinery Directive 2023/42/EC of the European Parliament and Council.
- (02) This certificate meets the requirements of the Supply of Machinery (Safety) Regulations 2008.

DETAILS

NAME & ADDRESS OF MANUFACTURER:
Conquip Engineering Group Ltd, Unit 4, Waterbrook Estate, Alton, Hampshire. GU34 2UD
NAME & ADDRESS OF PERSON TO COMPILE TECHNICAL FILE:
Name: Daniel Critchley Address: Conquip Engineering Group, Unit 4, Waterbrook Estate, Alton, Hampshire. GU34 2UD
NAME & ADDRESS OF AUTHORISED REPRESENTATIVE IF ONE HAS BEEN MANDATED BY THE MANUFACTURER:
N/A
NAME, ADDRESS, AND IDENTIFICATION NUMBER OF THE NOTIFIED BODY (01) OR APPROVED BODY (02), WHERE APPLICABLE:
N/A

EQUIPMENT DESCRIPTION

PRODUCT CODES	GENERAL DESCRIPTION / DESIGNATION	WORKING LOAD LIMIT
CA125AH-01000	Rescue Cage	1000kg

HARMONISED STANDARDS & REGULATIONS

ITEM	CODE	DESCRIPTION
EC DIRECTIVE / REGULATION	2023/42/EC	Directive 2023/42/EC- new machinery directive
HARMONISED STANDARDS	BS EN ISO 12100:2010	Safety of machinery General principles for design Risk assessment and risk reduction
	BS EN 14502-1:2010	Cranes. Equipment for the lifting of persons. Suspended baskets
	BS 8681:2024	Personal Fall Protection Equipment - Anchor Systems
OTHER REGULATIONS	LOLER 1998	Lifting Operations and Lifting Equipment Regulations 1998 (LOLER)
	PUWER 1998	Provision and Use of Work Equipment Regulations 1998 (PUWER)

DECLARATION

PLACE OF DECLARATION:
Alton
DATE OF DECLARATION:
March 2026

I declare that the above equipment meets the Essential Health and Safety requirements of the
 (01) Machinery Directive 2023/42/EC of the European Parliament and Council.
 (02) Supply of Machinery (Safety) Regulations 2008 and Section 6 of the Health and Safety at Work Etc. Act 1974.

NAME:	POSITION:	SIGNATURE:
Daniel Critchley	Chief Executive Officer	

TALKING TO US IS EASY
WE'RE HERE TO HELP

Call us on 0333 300 3470
Email us at sales@cqegroup.com
www.cqegroup.com

